


blade lite installation guide

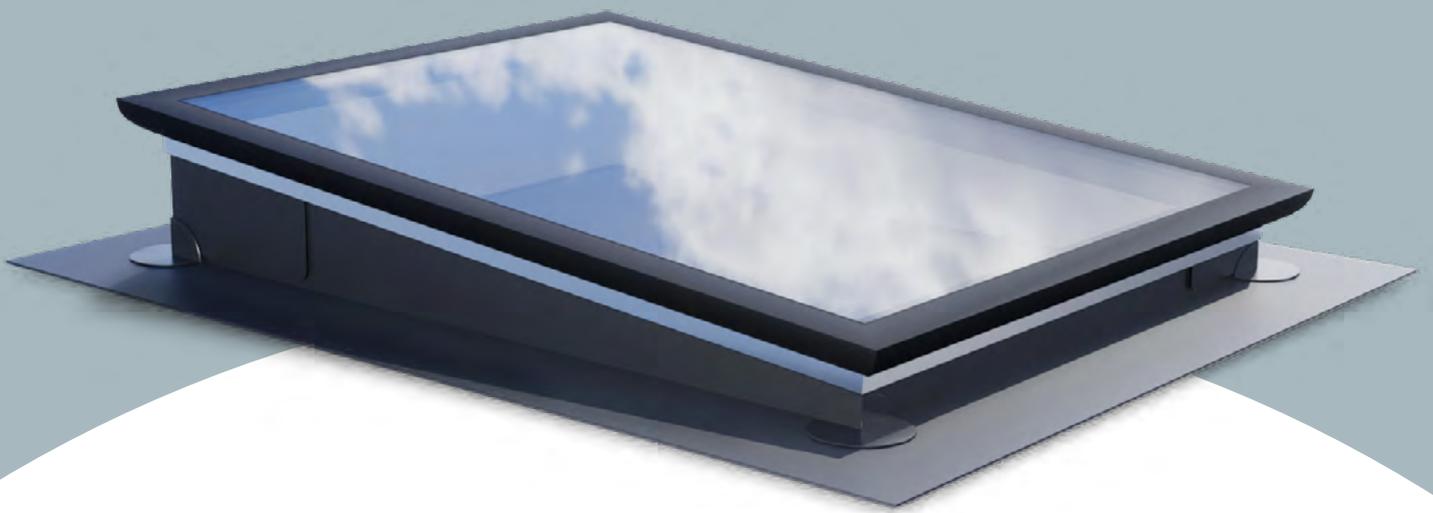

offset^o

Blade lite instruction manual


If planned correctly the installation of your Blade lite is really simple and should only take about 20 minutes.

Instructions



- 1)** Ensure you have allowed enough people to offload the rooflight from the delivery vehicle. You should allow one person for each 25-30 kgs. If you do not have enough people please arrange suitable lifting equipment

- 2)** Remove protective covering as necessary and make sure product is dry.

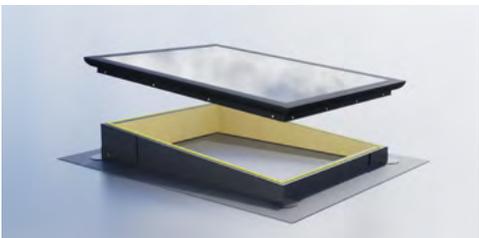


- 3)** Clean top of finished kerb and apply 8mm bead of silicone or double-sided expanding foam tape on top of finished kerb to create secondary seal.



- 4)** Lift the Blade lite above the kerb and gently lower into position. Do not rest aluminium frame on floor whilst carrying, rest on timber or insulation to prevent metal getting damaged.

- 5)** Make sure rooflight is evenly spaced all the way around. Use packers if necessary to stiffen up the rooflight against the kerb. (Either horseshoe or glazing packers) Location of packers should be in-between predrilled holes and kerb.

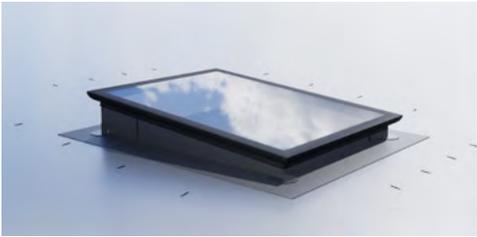

- 6)** Drill through pre-drilled holes using 70mm screws at 5mm gauge into the timber kerb. Do not over-tighten as you may warp the aluminium frame.
-



- 7)** Clip the screw hole cover trims into place. Locate the bottom edge and then clip in at the top or slide the trims into place. You may need to use a soft-faced mallet to ensure final positioning to make sure clips are fully engaged.
-

- 8)** Give the glass and aluminium frame a good clean with glass cleaner and warm soapy water.
-



- 9)** Job done...enjoy your 'forever rooflight'.

Love • Design • Order • Enjoy

offset^o

Love • Design • Order • Enjoy

01733 215564
info@offset.co.uk
offset.co.uk

Offset Ltd.
BCS House, Pinfold Road
Bourne, Lincs PE10 9HT